

USA Edition A.2008  
Order no. 6522.0009.13  
Part no. 451.584.01.87



[www.smart.com](http://www.smart.com)

smart - a brand of DaimlerChrysler

## Quick Guide

smart fortwo coupé and smart



### Let the fun begin

This Quick Guide will quickly and efficiently inform you about the most important functions of your vehicle. It does not, however, in any way, replace the Operator's Manual.

This is especially significant with regard to warnings and cautions. This Guide should only be used as a reference. Therefore it is imperative that you read the Operator's Manual carefully and completely before your first drive, paying special attention to the chapter "Safety". Doing so will help you obtain the maximum pleasure from your vehicle and avoid endangering yourself and others.

Items of optional equipment are marked with an asterisk \*. The equipment in your vehicle may vary, depending on the model and availability.

smart is constantly updating its vehicles to the very latest state of the art and therefore reserves the right to introduce changes in design, equipment and technical features at any time. You cannot, therefore, base any claims on the data, illustrations or descriptions in this Quick Guide.

The Operator's Manual, Quick Guide and Maintenance/Warranty Booklet (USA only) or Service/Warranty Booklet (Canada only) belong to the vehicle. You should always keep these documents in the vehicle and make sure that you pass them on to the next owner if and when you come to sell your smart. Please contact an authorized smart center if you have any further questions. The Technical Documentation team at DaimlerChrysler AG wishes you many happy hours at the wheel.

### Warning!

Various warning stickers are affixed to your vehicle. Their purpose is to draw your attention, and the attention of others, to various dangers. Therefore, do not remove any warning stickers unless the sticker clearly states that you may do so. If you remove the warning stickers, you or others could be injured by failing to recognize certain dangers.

### Symbols

- \* Optional extra
-  Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others
-  Highlights hazards that may result in damage to your vehicle
-  Helpful hints or further information you may find useful
- > This symbol points to instructions for you to follow
- > A number of these symbols appearing in succession indicates a multiple-step procedure (several >)

### Warning!

To help avoid personal injury, be extremely careful of the use of incorrect or inappropriate parking spaces.

If you have questions about carrying out the instructions, please contact your authorized smart center.

Your authorized smart center is the best source of information. For e-mail, please contact your local smart center.

If you are interested in further information, please contact your authorized smart center. We consider your privacy very important.

For further information, please contact your authorized smart center.

Therefore, information in this Quick Guide is not to be used as a basis for any claims.

Reprinting, translation or other use without the written permission of DaimlerChrysler AG is prohibited.

**>> Table of contents.**

**>> At a glance..... 2**

**Cockpit** ..... 2  
**Instrument cluster (miles)** ..... 4  
**Instrument cluster (kilometers)** ..... 6  
**Upper center console** ..... 8  
**Lower center console** ..... 9  
**Door control panel** ..... 10  
**Overhead control panel** ..... 11  
**Storage compartments** ..... 12


**>> Getting going..... 14**

**Opening and closing** ..... 14  
Key ..... 14  
Starter switch positions ..... 14  
Opening the upper tailgate on the coupé 15  
Opening the lower tailgate on the coupé 15  
Closing the tailgate(s) on the coupè . . . 16  
Opening and closing the retractable  
soft top ..... 16  
Opening the tailgate on the cabrio . . . . 16  
Opening and closing the rear soft top . . 17  
Closing the tailgate on the cabrio . . . . 17

**>> Operation..... 18**

**Refueling** ..... 18  
Refueling ..... 18  
**Tire inflation pressure** ..... 20  
Recommended tire inflation pressure . . . 20

## Cockpit

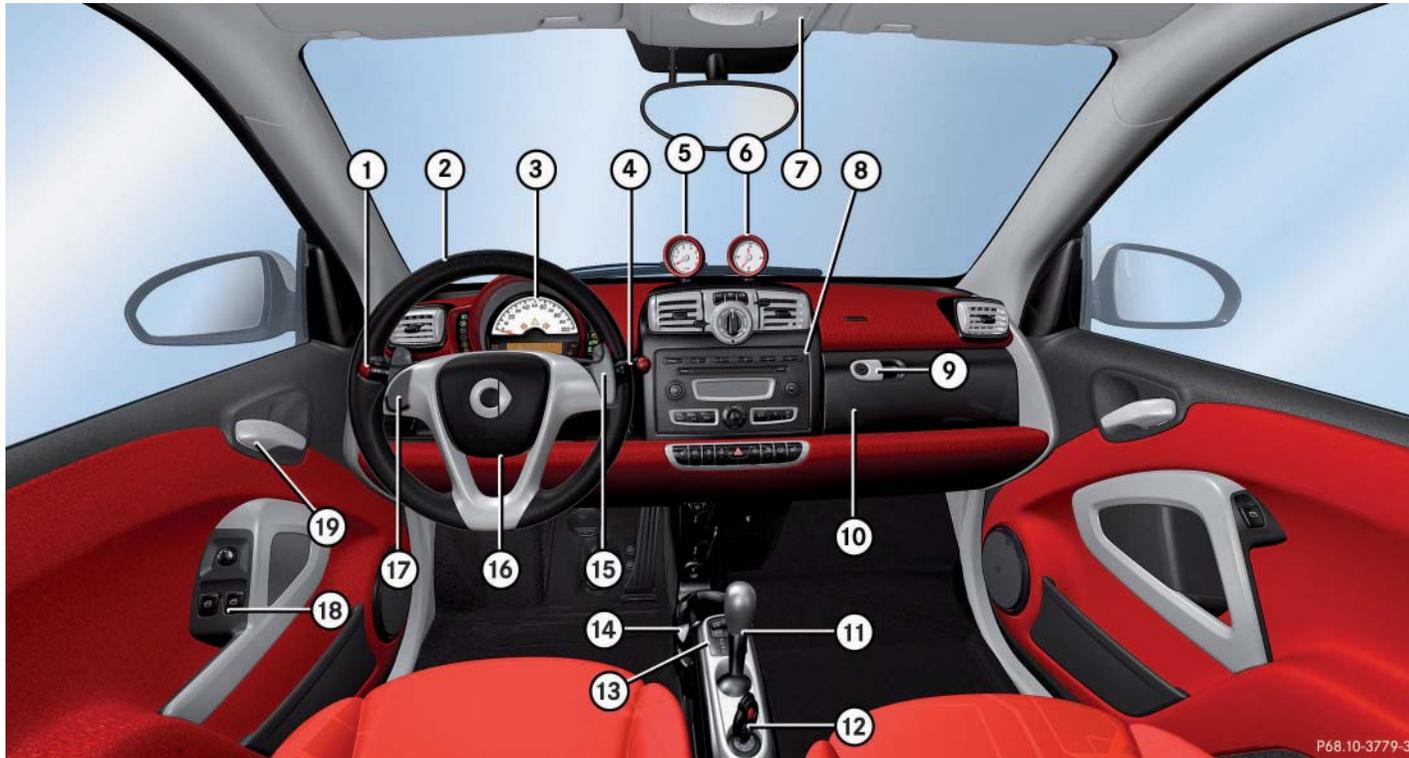

### 2 >> At a glance.

**Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

## Cockpit

	Function
①	Exterior lamp switch Low beam Turn signals High beam
②	Steering wheel
③	Instrument cluster <ul style="list-style-type: none"> <li>• Kilometers</li> <li>• Miles</li> </ul>
④	Wiper switch Windshield wipers Rear window wiper
⑤	Tachometer*
⑥	Cockpit clock*

**i** Model pure only:  
The steering wheel in this vehicle varies from steering wheel illustrated.

	Function
⑦	Overhead control panel Interior rear view mirror, Interior lighting,  <b>PASS AIR BAG OFF</b> Passenger front air bag off indicator lamp
⑧	Upper center console
⑨	Glove box release Glove box lock
⑩	Glove box smart MP3 interface* (AUX-socket*)
⑪	Gear selector lever
⑫	Starter switch
⑬	Coin holder Retractable soft top switch <sup>1</sup>
⑭	Cup holder

<sup>1</sup> cabrio only

	Function
⑮	Right shift paddle <sup>1</sup> : Upshift
⑯	Horn
⑰	Left shift paddle <sup>1</sup> : Downshift
⑱	Opening and closing side windows Adjusting exterior rear view mirrors
⑲	Inside door handle

<sup>1</sup> Model passion only.

**Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

>> At a glance. 3

## Instrument cluster (miles)



P54.32-5172-31

### 4 >> At a glance.

**Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

## Instrument cluster (miles)

	Function		Function		Function
①	Selecting display for status indicator Setting digital clock	⑤	 Right turn signal indicator lamp	⑩	Multifunction display with: <ul style="list-style-type: none"> <li>• Fuel level display</li> <li>• Transmission position indicator</li> <li>• Main odometer display or when active distance to next maintenance service</li> <li>• Digital clock</li> <li>• Outside temperature display</li> </ul>
②	Left side indicator lamp display with: <ul style="list-style-type: none"> <li> Low beam headlamp indicator lamp</li> <li> High beam headlamp indicator lamp</li> <li> Combination low tire pressure/TPMS malfunction telltale</li> <li> Seat belt telltale</li> <li> SRS indicator lamp</li> </ul>	⑥	Speedometer		
		⑦	Right side indicator lamp display with: <ul style="list-style-type: none"> <li> EPS* warning lamp</li> <li> Engine malfunction indicator lamp</li> <li> ABS indicator lamp</li> <li> Brake warning lamp</li> </ul>		Status indicator with: <ul style="list-style-type: none"> <li>• Trip odometer display</li> <li>• Maintenance service interval display</li> <li>• Reserve fuel indicator</li> </ul>
③	 Left turn signal indicator lamp	⑧	Adjusting instrument cluster illumination Setting digital clock	⑪	
④	 ESP® warning lamp	⑨	Right center indicator lamp display with: <ul style="list-style-type: none"> <li> Engine oil pressure indicator lamp</li> <li> Coolant temperature warning lamp</li> </ul>	⑫	Left center indicator lamp display with: <ul style="list-style-type: none"> <li> Battery indicator lamp</li> </ul>

 **Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

>> At a glance. 5

## Instrument cluster (kilometers)



P54.32-5171-31

### 6 >> At a glance.

**Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

## Instrument cluster (kilometers)

	Function		Function		Function
①	Selecting display for status indicator Setting digital clock	⑤	 Right turn signal indicator lamp	⑩	Multifunction display with: <ul style="list-style-type: none"> <li>• Fuel level display</li> <li>• Transmission position indicator</li> <li>• Main odometer display or when active distance to next maintenance service</li> <li>• Digital clock</li> <li>• Outside temperature display</li> </ul>
②	Left side indicator lamp display with: <ul style="list-style-type: none"> <li> Low beam headlamp indicator lamp</li> <li> High beam headlamp indicator lamp</li> <li> Combination low tire pressure/TPMS malfunction telltale</li> <li> Seat belt telltale</li> <li> SRS indicator lamp</li> </ul>	⑥	Speedometer		
③	 Left turn signal indicator lamp	⑦	Right side indicator lamp display with: <ul style="list-style-type: none"> <li> EPS* warning lamp</li> <li> Engine malfunction indicator lamp</li> <li> ABS indicator lamp</li> <li> Brake warning lamp</li> </ul>		Status indicator with: <ul style="list-style-type: none"> <li>• Trip odometer display</li> <li>• Maintenance service interval display</li> <li>• Reserve fuel indicator</li> </ul>
④	 ESP® warning lamp	⑧	Adjusting instrument cluster illumination Setting digital clock	⑪	Left center indicator lamp display with: <ul style="list-style-type: none"> <li> Battery indicator lamp</li> </ul>
		⑨	Right center indicator lamp display with: <ul style="list-style-type: none"> <li> Engine oil pressure indicator lamp</li> <li> Coolant temperature warning lamp</li> </ul>	⑫	

 **Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

>> At a glance. 7

## Upper center console




	Function
①	Tachometer*
②	Cockpit clock*
③	Control panel <ul style="list-style-type: none"> <li>• Heating</li> <li>• Climate control*</li> </ul>
④	Audio system*
⑤	Hazard warning flasher switch
⑥	Switching the tow-away protection*/interior sensor* on/off

	Function
⑦	Switching seat heating* on/off, passenger side
⑧	Restarting TPMS button
⑨	Central unlocking switch
⑩	Central locking switch
⑪	Switching front fog lamps* on/off
⑫	Switching seat heating* on/off, driver's side

### 8 >> At a glance.

**Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

## Lower center console

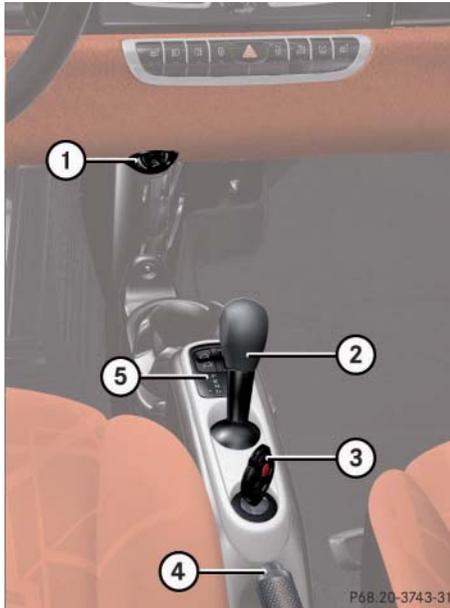


	Function
①	Auxiliary power outlet
②	Gear selector lever
③	Starter switch
④	Parking brake lever
⑤	Coin holder Retractable soft top switch <sup>1</sup>

<sup>1</sup> cabrio only.

**Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

>> At a glance. 9

## Door control panel

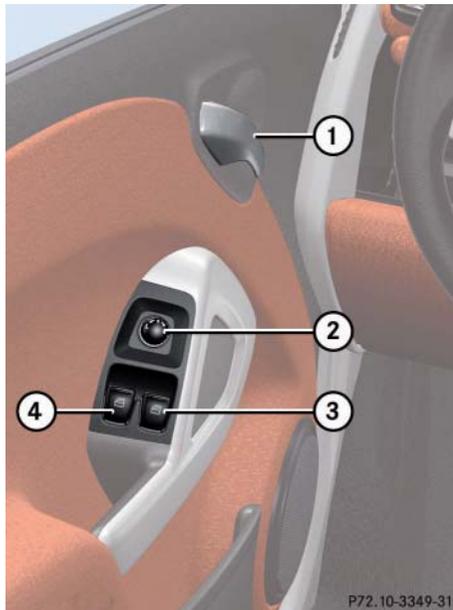

	Function
①	Inside door handle
②	Adjusting exterior rear view mirrors <ul style="list-style-type: none"><li>• Manually</li><li>• Electrically<sup>1</sup></li></ul>
③	Opening and closing right side window <ul style="list-style-type: none"><li>• Manually</li><li>• Electrically<sup>1</sup></li></ul>
④	Opening and closing left side window <ul style="list-style-type: none"><li>• Manually</li><li>• Electrically<sup>1</sup></li></ul>

<sup>1</sup> Model passion only.

10 >> At a glance.

 **Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

## Overhead control panel



P82.00-2490-31


	Function
①	Passenger front air bag off indicator lamp
②	Switching interior lighting on/off
③	Interior rear view mirror



**Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

>> At a glance. 11

## Storage compartments

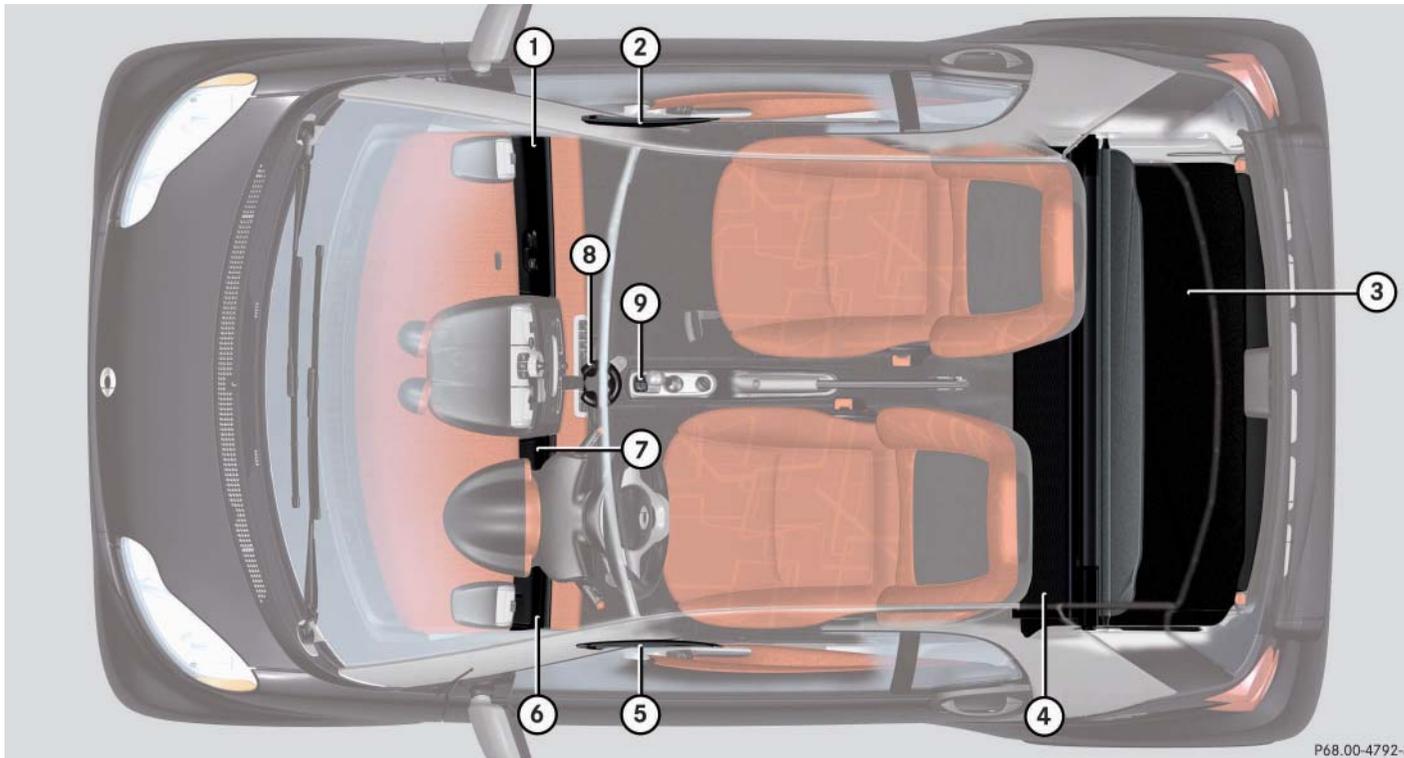

12 >> At a glance.

**Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

## Storage compartments

	Function
①	Glove box
②	Door pocket, passenger side
③	Storage compartment in tailgate <sup>1</sup>
④	Parcel net bag <sup>2</sup>
⑤	Door pocket, driver's side
⑥	Storage left to the steering wheel
⑦	Storage right to the steering wheel
⑧	Cup holder
⑨	Coin holder

<sup>1</sup> coupé only.


<sup>2</sup> Vehicles with cargo compartment cover blind only.

 **Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

>> At a glance. 13

## Opening and closing

### Key

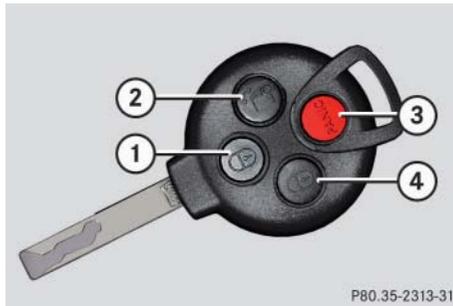

P80.35-2313-31

#### Key with remote control


- ① Lock button
- ② Opening the retractable soft top<sup>1</sup>/unlocking the upper tailgate<sup>2</sup>
- ③ **PANIC** Panic button
- ④ Unlocking button

> **Selective unlocking:** Press button ④ once. The driver's door and the fuel filler flap are unlocked.

1 cabrio only.  
2 coupé only.

- > **Global unlocking:** Press button ④ twice. The passenger door and the tailgate are unlocked in addition to the driver's door and the fuel filler flap.
- > **Global locking:** Press button ①. With the doors, the tailgate(s), and the fuel filler flap closed, the vehicle locks.

### Starter switch positions

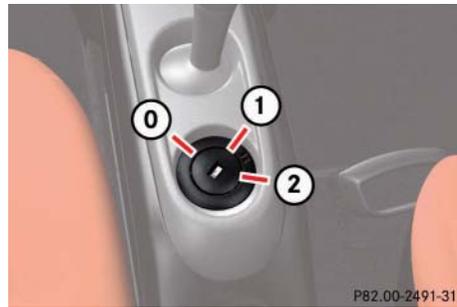

P82.00-2491-31

#### Starter switch

- 0 For removing key
- 1 Ignition (power supply for all electrical consumers) and driving position
- 2 Starting

**i** When you turn the key in starter switch position 1, indicator and warning lamps in the instrument cluster come on. They go out if the engine is running. This indicates that the indicator and warning lamps for the respective systems are operational.

## Opening and closing

### Opening the upper tailgate on the coupé

#### **Warning!**

Make sure the tailgate is closed when the engine is running and while driving. Among other dangers, deadly carbon monoxide (CO) gases may enter vehicle interior resulting in unconsciousness and death

#### **Warning!**

The rear body apron around the area of the engine air extractor vent can become very hot. To prevent burns, avoid touching this area with bare skin, or parts of your clothes.



P72.20-2662-31

- ① Handle recess
  - > Press button  on the key twice.
  - > Press an hold button  on the key for approximately two seconds.
- or
- > Pull the release handle in the handle recess ① of the upper tailgate. The tailgate is unlocked.
  - > Swivel the upper tailgate upwards to open.

### Opening the lower tailgate on the coupé



P72.20-2663-31

- ① Release lever
- > Open the upper tailgate.
- > Pull both release levers ① backwards either simultaneously or one after the other. The lower tailgate is unlocked.
- > Swivel the lower tailgate downwards to open. The lower tailgate is held in the horizontal position by means of the two retaining straps.

 **Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

>> Getting going. 15

## Opening and closing

### Closing the tailgate(s) on the coupè

#### Warning!

To prevent possible personal injury, always keep hands and fingers away from the cargo compartment opening when closing the tailgate(s). Be especially careful when small children are around.



- > Swivel the lower tailgate upwards to close. Allow the two release levers to engage audibly.

- > Swivel the upper tailgate downwards to close.

### Opening and closing the retractable soft top<sup>1</sup>

You can fully open the retractable soft top with the key.

- > **Opening:** Press the  button of the key for approximately two seconds. The retractable soft top opens.

 Pressing symbols , , or  on the key with remote control while opening the retractable soft top will interrupt the opening procedure.

- > **Closing:** Press symbol  on the retractable soft top switch

 The remote control has an operating range of approximately 50 ft (15 meters). Take care that you do not inadvertently open your vehicle's retractable soft top.

<sup>1</sup> cabrio only.

### Opening the tailgate on the cabrio

#### Warning!

Make sure the tailgate is closed when the engine is running and while driving. Among other dangers, deadly carbon monoxide (CO) gases may enter vehicle interior resulting in unconsciousness and death.

#### Warning!

High outside temperature, stop-and-go traffic, driving on long uphill grades, or driving at high engine speed may increase the temperature in the engine compartment. Therefore the area around the air slots in the rear apron may be hot. Let the engine cool off before touching this area to prevent burns.

## Opening and closing



P72.20-2666-31

- ① Handle recess
- > Press button **S** on the key twice.
- > Pull the release handle in handle recess ① of the tailgate.
- The tailgate is unlocked.
- > Swivel the tailgate downwards to open.

### Opening and closing the rear soft top<sup>1</sup>

You can fold the rear soft top up to ease loading and unloading.

<sup>1</sup> cabrio only.



P72.20-2666-31

- ① Release lever
- > **Opening:** Push the release levers ① to the left and right of the retaining clip upwards.
- > Swivel the rear soft top upwards to open.
- > **Closing:** Swivel the rear soft top downwards to close.
- > Pull soft top down
- > Pull release levers ① to the left and right of the retaining clip downwards.
- > Make sure that the rear soft top is correctly locked in place on both sides.

### Closing the tailgate on the cabrio

**!** When locking the tailgate, you must first lock the rear soft top. Otherwise you might break the release levers.

#### **Warning!**

To prevent possible personal injury, always keep hands and fingers away from the cargo compartment opening when closing the tailgate. Be especially careful when small children are around.

- > Swivel the tailgate upwards to close.
- Let the tailgate lock into place.

**!** **Warning!** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

>> Getting going. 17

## Refueling

### Refueling

#### Warning!


Gasoline is highly flammable and poisonous. It burns violently and can cause serious personal injury. Never allow sparks, flame or smoking materials near gasoline!

Turn off the engine before refueling. Whenever you are around gasoline, avoid inhaling fumes and skin or clothing contact, extinguish all smoking materials. Direct skin contact with gasoline and the inhalation of gasoline vapors are damaging to your health.

The fuel filler flap is located on the passenger side towards the rear.

Locking/unlocking the vehicle with the key automatically locks/unlocks the fuel filler flap

**i** In case the central locking system does not release the fuel filler flap, or the opening mechanism is clamping, contact Roadside Assistance or an authorized smart center.

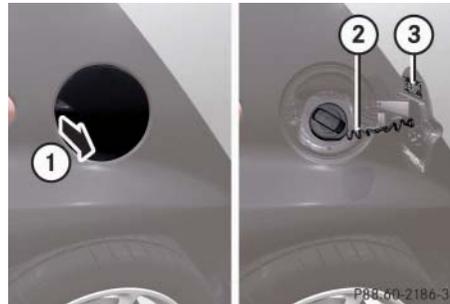

- ① Opening the fuel filler flap
- ② Tether
- ③ Fuel type

**!** Do not put diesel in vehicles with petrol engines. Do not mix petrol with diesel. Even small quantities of diesel will damage the injection system. Damage caused by adding diesel will not be covered by the smart Limited warranty.

- > Turn off the engine.
- > Remove the key from the starter switch.
- > Open the fuel filler flap by pulling at the point indicated by arrow ①.
- > Turn the fuel filler cap counterclockwise and hold on to it until possible pressure is released.
- > Take off the fuel filler cap.

**!** The fuel filler cap is tethered to the fuel filler flap. Do not drop the fuel filler cap. It could damage the vehicle paint finish.

**i** Only use premium unleaded gasoline with a minimum Posted Octane Rating of 91 (average of 96 RON/86 MON). Information on gasoline quality can normally be found on the fuel pump. Please contact gas station personnel in case labels on the pump cannot be found.

- > To prevent gasoline vapors from escaping into open air, fully insert filler nozzle unit.
- > Only fill your tank until the filler nozzle unit cuts out - **do not top off or overfill.**

## Refueling

- > Replace the fuel filler cap.
- > Turn the fuel filler cap clockwise until the handle grip overturns.

**i** Make sure to close the fuel filler flap before locking the vehicle as the fuel filler flap locking pin prevents closing after you have locked the vehicle.

- > Close the fuel filler flap.  
You should hear the latch close shut.

**! Risk of injury** It is imperative that you read your vehicle's detailed Operator's Manual carefully and completely. You could otherwise fail to recognize dangers, which could result in injury to yourself and/others.

>> **Operation. 19**


## Tire inflation pressure

### Recommended tire inflation pressure

The tire inflation pressure should be checked regularly and should only be adjusted on cold tires. The tires can be considered cold if the vehicle has been parked for at least 3 hours or driven less than 1 mile (1.6 km).

Follow recommended cold tire inflation pressure listed on Tire and Loading Information placard on the driver's door B-pillar.

**i** Data shown on Tire and Loading Information placard example are for illustration purposes only. Tire data are specific to each vehicle and may vary from data shown in the following illustration. Refer to Tire and Loading Information placard on vehicle for actual data specific to your vehicle.

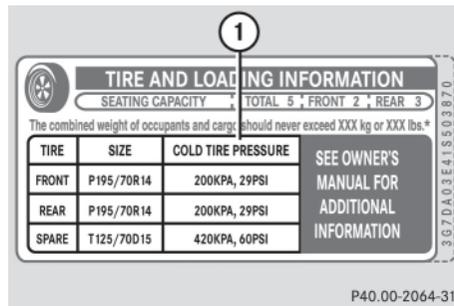

TIRE AND LOADING INFORMATION		
SEATING CAPACITY		TOTAL 5, FRONT 2, REAR 3
The combined weight of occupants and cargo should never exceed XXXX kg or XXXX lbs.*		
TIRE	SIZE	COLD TIRE PRESSURE
FRONT	P195/70R14	200KPA, 29PSI
REAR	P195/70R14	200KPA, 29PSI
SPARE	T125/70D15	420KPA, 60PSI

SEE OWNER'S MANUAL FOR ADDITIONAL INFORMATION

P40.00-2064-31

① Tire and Loading Information placard with recommended cold tire inflation pressure (example)

The Tire and Loading Information placard lists the recommended cold tire inflation pressures for maximum loaded vehicle weight. The tire inflation pressures listed apply to the tires installed as original equipment.